



Hoover's quick & snappy start up guide.

8 kg Heat Pump
Dryer



Model #: **HV-LHP8**

Version #: **V1.1**

After Sales Support **1300 886 649**

Let's get your washing machine up and running!

Welcome to your new Hoover heat pump dryer! We hope that this product brings you many years of enjoyment.

When unpacking the dryer, make sure to remove both pieces of packaging foam from the drum.

Position your new heat pump dryer in a clean and dry, well ventilated area. The floor must be firm, flat and stable. Adjust the leveling feet if your floor is slightly uneven. Don't place the dryer on carpet or other soft surfaces, which could block the air intake. Leave sufficient room at the back for air dissipation.

The dryer produces condensate water which is by default collected in the in-built water container and needs to be emptied. You can also drain the condensate water directly into a sink, using the external drain hose.



NOTE: Before you use the dryer for the first time, place some clean, damp rags into the drum and run a complete cycle on the Gentle-Light program for 30 minutes following the instructions in the manual.

For detailed installation instructions, please consult the supplied instruction manual, which also has comprehensive usage instructions and important safety advice.

Instructions




- Rotate the dial on the control panel to switch on the dryer and select the desired program (Fig. 1).
- The display screen (Fig. 2) will show the settings, time remaining, options, codes, etc.
- When using the Gentle-Light program, press the Duration button to extend the default drying time in 10 minute steps.
- Press the Dry Level button to select the drying level (if the program allows).
- Press the Anti-Crease button to extend the duration of the anti-crease phase.
- Press the Delay Start button to set the delay start time (from 1 to 24 hours).
- Press the Start/Pause button to start or pause a drying program.
- Optionally, you can also press and hold the Duration and Dry Level buttons at the same time to set/cancel the child lock, and/or press and hold the Anti-Crease and Delay Start buttons at the same time to mute the buzzer.

For details about all drying programs, please refer to the table on page 16 of the supplied instruction manual.

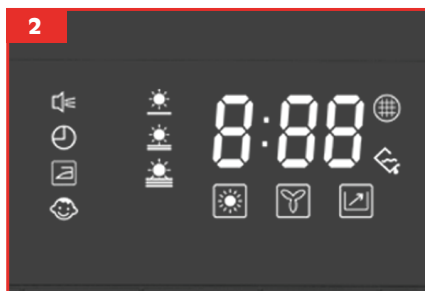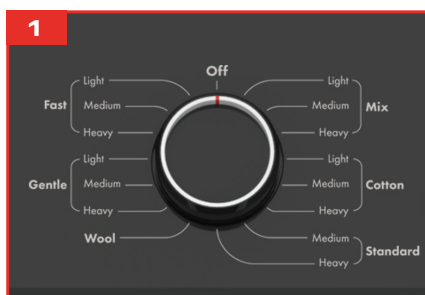





Afterwards

- At the end of the drying program, when the drum has stopped rotating, unplug the machine, open the door and take out your washing.
- When the drum has cooled, take the lint filter case out of the door opening (Fig. 3a) and wipe or brush it clean. If required, wash the filter in warm water, rinse and let dry. When it is completely dry, refit the filter into the door opening.
- Unless you have the drain hose connected, you will also have to empty the water container after every drying cycle (Fig. 3b).
- Hold the container with both hands and pull it out of the dryer housing. Tilt it over a sink and pour out the water (Fig. 3c).
- Wipe the container dry, then reinsert it into its space in the dryer housing.

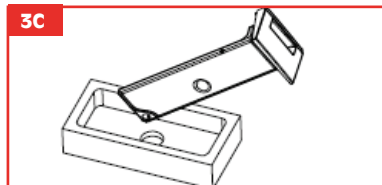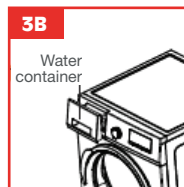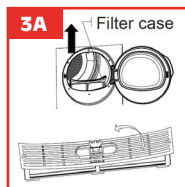

Cleaning the Filter Drawer

- Lint and fibres that could not be captured by the lint filter are blocked in the filter drawer, which should also be cleaned after each drying process. It is located behind the maintenance cover and contains a two-level filter: a filter drawer sponge and a filter cloth.
- Push down the locking latch to the maintenance cover (Fig. 4a).
- Unlock the fixer (Fig. 4b).
- Pull out the filter drawer (Fig. 4c).
- Remove any lint, fibres and textile threads from the filter cloth by hand or with a soft brush or cloth (Fig. 4d). When you notice a layer of lint or debris that may lead to clogging of the filter cloth, clean off the layer by washing the filter in warm water. Let the filter cloth dry thoroughly before installing it back in the filter drawer.
- Wash the filter drawer sponge by hand to remove any fibres and lint from the surface. After washing the sponge, squeeze it by hand and remove the excess water. Thoroughly dry the sponge before reinstalling it.
- Close the maintenance cover.

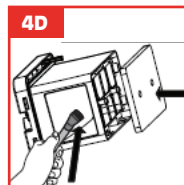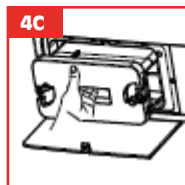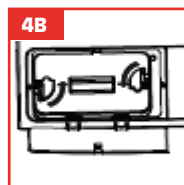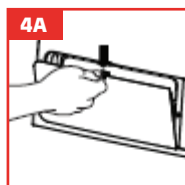

Hope you enjoy your new Hoover
washing machine.